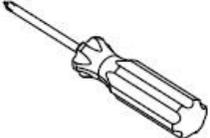
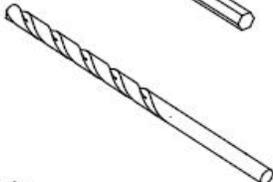
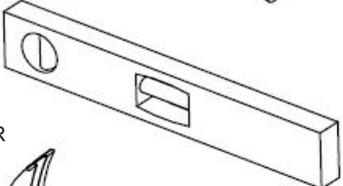
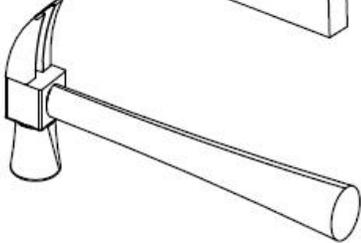
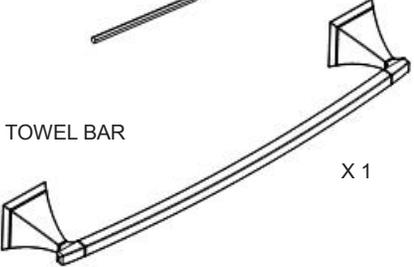


ITEMS INCLUDED	TOOLS REQUIRED
DRY WALL ANCHOR  X 4	PHILLIPS SCREW DRIVER 
TILE ANCHOR  X 4	PEN / PENCIL 
#8 SCREW  X 4	1/4" (6 mm) DRILL 
MOUNTING BRACKET  X 2	LEVEL SET 
M6 X 1 SET SCREW  X 2	HAMMER 
3MM ALLOY STEEL HEX KEY  X 1	
TOWEL BAR  X 1	

INSTALLATION INSTRUCTIONS

4902 4903

TOWEL BAR

GINGER
Luxury For Your Lifestyle™


2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207


WWW.GINGERCO.COM

GNG - 4902 4903
 EN-2087
 REV -

① REMOVE MOUNTING BRACKETS

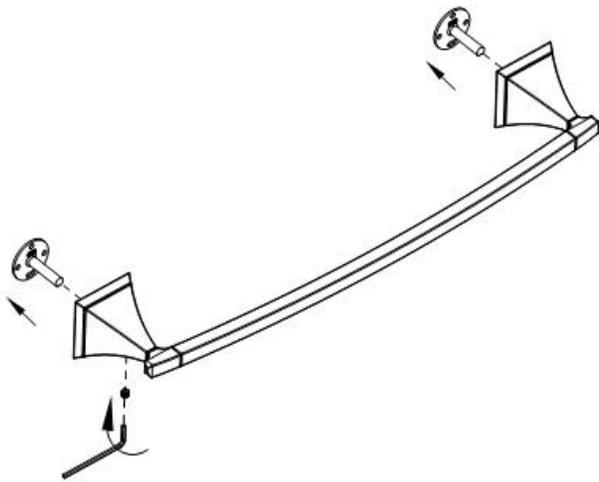


② ALIGN MOUNTING BRACKETS AND MARK LOCATION

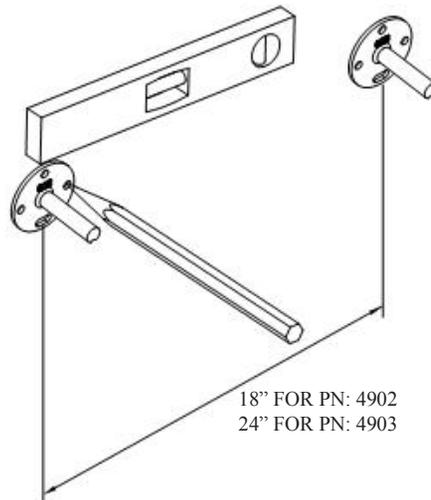

③ DRY WALL INSTALLATION

DO NOT DRILL

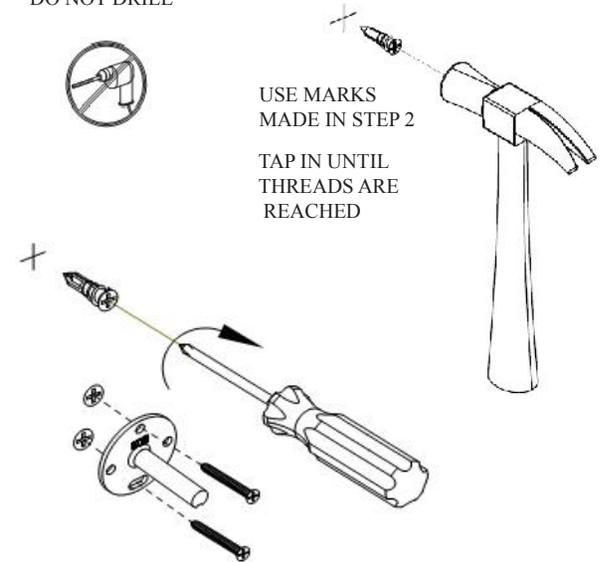


④ TILE OR SOLID WALL INSTALLATION


USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

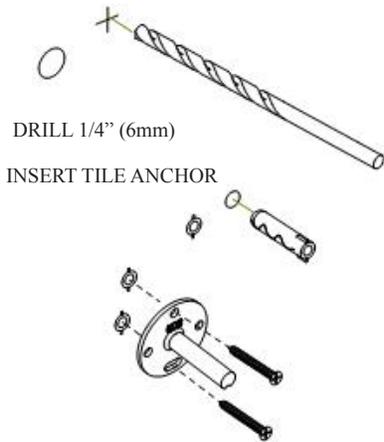

⑤ INSTALL PRODUCT ONTO BRACKETS

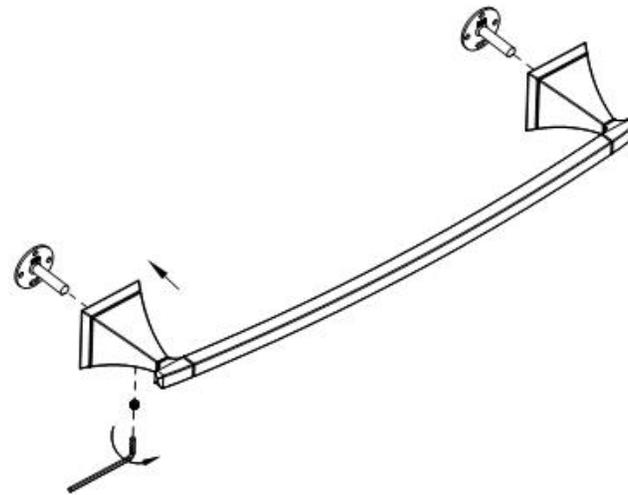

SECURE WITH SET SCREW