


## KARTNERS


LONDON COLLECTION
DOUBLE SHOWER DOOR HANDLE 2487806/7808/7812/7818/7824

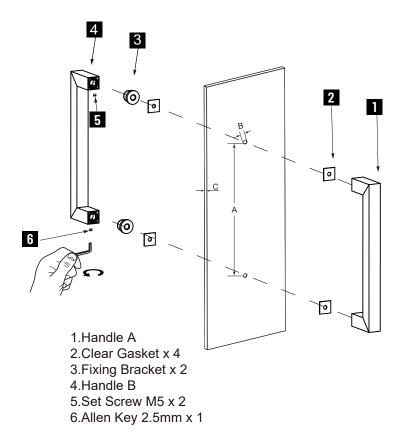

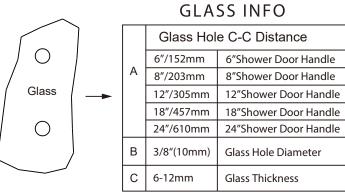


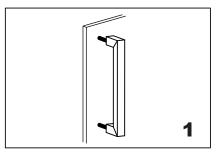


Install the handle A (bolt) through the glass holes, make sure the rubber gaskets are between handle&glass.

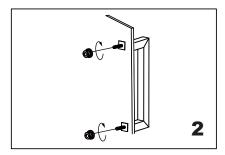

Screw in the fixing brackets into the handle bolts.

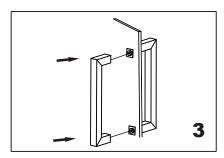

Add the handle B end caps on the fixing brackets, make sure the set screws holes in the bottom.

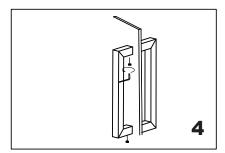

Fix the set screws on the end caps, tighten it to avoid loose from fixing brackets.