

**Step 1 :** Place adhesive around top of cabinet

**Step 2 :** Position and set vanity top on cabinet

**See Figure 1.**

**Step 3 :** Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop.

(There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead)


**See Figure 2.**

**Step 4 :** From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty


**See Figure 3.**

**Step 5 :** Attach p-trap to tailpiece.

**Figure 1.**

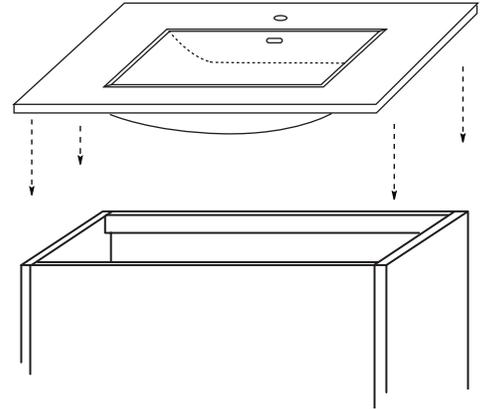

**Figure 2.**

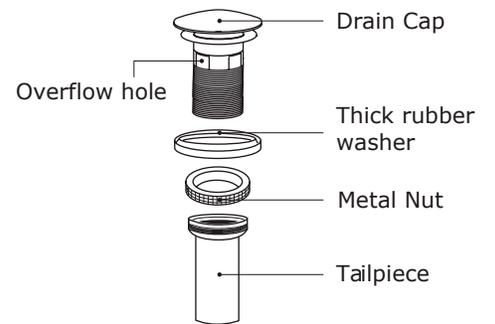

**Figure 3.**

