


HAND TOWEL BAR

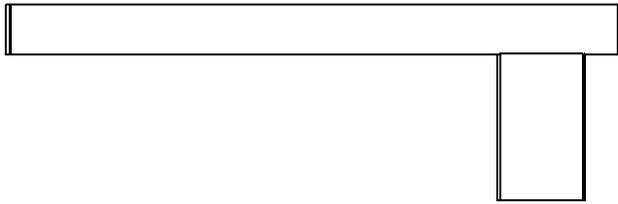

HAND TOWEL BAR



MOUNTING SCREW BRACKET



SET SCREW



MOUNTING SCREWS (2)




DRY WALL ANCHORS(2)



ALLEN KEY

- 1- Take the hand towel bar out of the box.
Place the post against the assigned wall location.
Make sure the bar is leveled and pointed to the right.
Mark with pencil the post position and remove the trim.

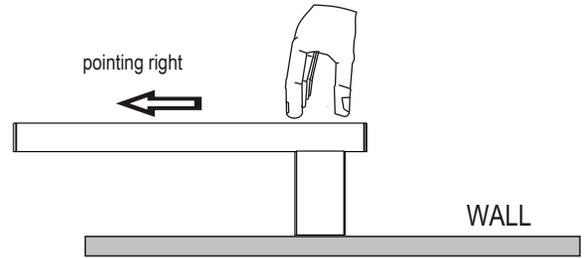


- 2- Using the Allen key provided, remove the mounting screw bracket from the bar post.

Press the mounting screw bracket against bar post position on the wall and mark the screw hole positions.

2a- INSTALLING ON WOODEN SURFACE

- For wooden surface, the mounting screw bracket can be secured by screwing the screws directly into the wall.


WOODEN SURFACE

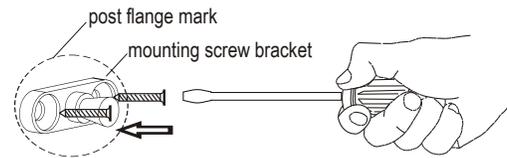

2b- INSTALLING ON A DRYWALL

- Using a drill, pre-drill holes for the anchors.
- Insert the anchors into the wall.
- The mounting screw bracket can be secured by screwing the screws into the anchors.


DRY WALL SURFACE

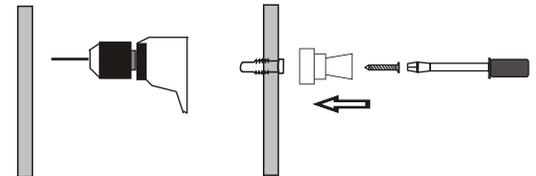

2c- IF INSTALLING ON A SOLID/HARD SURFACE

- Measure the dimensions carefully.
- Using a drill, pre-drill the holes.
- Secure the mounting screw bracket by screwing the screws into the wall.

HARD SURFACE

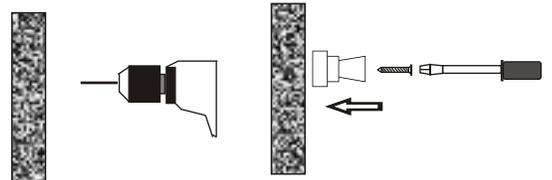

- 3- Press the post against the mounting screw bracket. Align the post and secure it by tightening the set screw.

- 4- Check the post to make sure it is firmly secured.
If not, tighten the set screw with the Allen key.

